RPB° PX5° PAPR

Powered Air Purifying Respirator

With the world's leading engineers and vital industry insight, we have changed the way people experience clean filtered air across multiple industries, from medical and chemical settings to the profoundly harsh environments encountered in foundries.

Through years of research and development and our wealth of respiratory protection knowledge, we have been able to refine the product features, create new functional capabilities, enhance the user experience and redefine what it means to be a powered air purifying respirator.







Protecting you for life's best moments.

RPB° PX5° PAPR











Battery - Sealed inside the unit, the long-life lithium-ion battery is protected so it will not disconnect or bump off while in operation. Lasting 12+ hours on fan speed 1, 9+ hours on fan speed 2 and 8+ hours on fan speed 3, the PX5 will supply clean filtered breathing and supply and supply clean entire shift.

Lightweight Compact
Design - With the
complete system
weighing just 2.55lbs,
the already light
PX5 strategically
distributes weight
through vertical
mounting and
contouring to the
users back.

Decontaminable - Sleek, considered lines and surfaces combined with our quick release belt mounting system ensures the decontamination process can be as simple as possible.

HE Filter Our filter media
removes up
to 99.97% of
particulates down
to 0.12 microns.



Ingress Protection With a completely
sealed housing,
the PX5 has been
certified to IP65
rating in use and
certified to IP67
rating with cleaning
kit in place.

User Interface –
Intuitive LED user
interface indicates
airflow, fan speed
and battery level.

Alarming - Visual, audible and vibrating alarms alert the user to low battery level, or when airflow falls below the minimum requirements due to the filter needing replacing or an obstructed air flow.

Filter Safety - The filter door cannot mount to the unit unless a filter is fixed in place. The PX5 cannot unknowingly be operated without a filter being installed to ensure users are always breathing clean filtered air.

US and Global patents pending.

mount lock system.

The PX5 unit attaches

to our flexi-belt (fitted

with either a standard belt or FR rated belt),

via our intuitive



RPB PX5 PAPR PAIRS WITH:













⚠WARNING

WARNING FOR THE STATE OF CALIFORNIA:

This product can expose you to chemicals including styrene, which is known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov.


△ WARNING

BEFORE PUTTING THE PX5® INTO SERVICE:

Make sure you have all required components for a complete NIOSH or CE/AS/NZS approved respirator:

- Respirator Helmet/Hood Assembly
 Breathing Tube Assembly
 PX5® PAPR
- Use of incomplete or inappropriate equipment, includingthe use of counterfeit or non-RPB® parts, can result in inadequateprotection and will void the approval of the entire respirator. Do not modify or alter any part of this product.
- Read the instruction manual for important safety information, product specifications, assembly, use, and care information.

 Make sure each PX5® user reads the manual and is trained as specified.
- For each activity, check protection requirements and product specifications. As applicable, check your workplace safety program, respiratory protection program, and standards and regulations for your activity or industry.

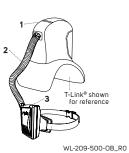



For more information on the RPB PX5 call 1-866-494-4599 email sales@rpbsafety.com or visit rpbsafety.com/px5

